

SONY Tech Tip

Radio type can be set using the Axxess Updater, available from www.axxessupdater.com, if you do not have a PC or mobile device you may use the steps below.

Step 1.) Program the interface to the vehicle.

Step 2.) Turn the ignition on, push and hold volume down on the wheel, until you get a solid **red** light on the interface.

Step 3.) Press and hold volume up until you get a solid **red** light, then release. Do this 22 times in total.

Step 4.) Push and hold volume down until you get a solid **red** light then release.

Step 5.) Go in to the General Settings on the radio, find the Steering Wheel Control menu, and change it from "Preset" to "Custom" then tap the wrench icon.

Step 6.) Push and hold the desired function on the screen for two seconds, then release, the box should stay illuminated in white. At this time, push and hold the corresponding button on the steering wheel. You will get an orange border around the button if it programs successfully. (Figure A) You will need to do this for each function.

Note: If a function does not program successfully, you may need to change the radio type on the interface to one of the other options highlighted in yellow below. (Fig. b)

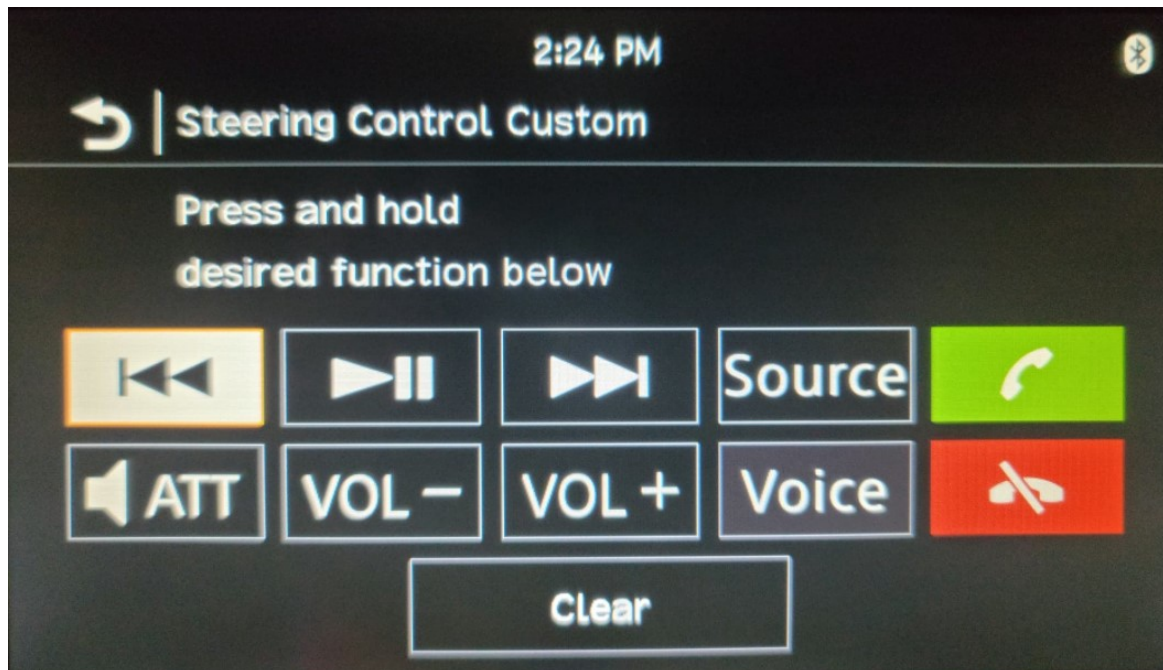


Figure A

Radio #	Radio	Radio #	Radio
1	Eclipse (Type 1)	13	LG
2	Kenwood	14	Parrot
3	Clarion (Type 1)	15	XITE
4	Sony/Dual	16	Phillips
5	JVC	17	Kicker
6	Pioneer/Jensen	18	JBL
7	Alpine	19	INSANE
8	Visteon	20	Magnadyne
9	Valor	21	Boss
10	Clarion (Type 2)	22	Axxera
11	Metra OE	23	Axxera (Type 2)
12	Eclipse (Type 2)		

Figure B

To change to one of the above radio types, you will repeat steps 2 through 4, but you will substitute the 22 in Step 3, with the Radio # listed next to the radio type. 9/10/21