

## Remapping

After the ASWC-1 has been programmed and functioning properly, the button assignment for the steering wheel controls may be reassigned. For example, **Seek Down** may be preferred to be **Mute** instead. This feature can be performed by either following the steps below, through a Windows based computer using the **Axxess Updater**, or through the **Axxess Updater** app available from the Android/Apple mobile devices app store.

**Note:** Apple mobile devices will require the use of the **AX-HUB** for this feature.

**Attention!** If more than 20 seconds elapses between steps, the procedure will abort, and the ASWC-1's light will go out. The ASWC-1 may not function properly and may need to be reset and reprogrammed.

1. Turn the key to ignition and wait until the ASWC-1's light flashes **Green** 1 time then goes out.
2. Immediately press and hold the **Volume Up** button on the steering wheel until the ASWC-1's light turns on solid **Green**, then release. The light will then go out indicating **Volume Up** has now been programmed.
3. Press and hold the **Volume Down** button on the steering wheel until the ASWC-1's light goes solid **Green**, then release. The light will then go out indicating **Volume Down** has now been programmed.
4. Continue from **Seek Up / Next** in the **Button Function Legend** to reference the order in which the steering wheel control buttons must be programmed.

**Note:** If a function in the legend is not present on the steering wheel, press the **Volume Up** button on the steering wheel until the ASWC-1's light turns on solid **Green**, then release. This will tell the ASWC-1 to skip that function.

5. To complete the remapping process, press and hold the **Volume Up** button on the steering wheel until the ASWC-1's light goes solid **Green**, then goes out. Release the **Volume Up** button on the steering wheel at this point. The remapping process is now complete.

### Button Function Legend

Function #	Function	Function #	Function
1	Volume Up	10	Band
2	Volume Down	11	Play / Enter
3	Seek Up / Next	12	PTT (push to talk)
4	Seek Down / Previous	13	On Hook
5	Source / Mode	14	Off Hook
6	Mute	15	Fan Up *
7	Preset Up	16	Fan Down *
8	Preset Down	17	Temp Up *
9	Power	18	Temp Down *

\* Not applicable in this application

**Note:** Certain radios may not have these commands. Please refer to the manual provided with the radio, or contact the radio Manufacturer for specific commands recognized by that particular radio.