



Volkswagen Touareg 2011-2014

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- ISO DDIN radio provision
- Painted high gloss black

KIT COMPONENTS

- A) Radio bezel • B) Radio brackets • C) ISO DDIN trim ring • D) Phillips screws (2)



TABLE OF CONTENTS

Dash Disassembly	2
Kit Preparation	3
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: Visit axessinterfaces.com
for wiring harness options

Antenna Adapter: 40-EU56 • 40-EU10 (NAV models)

TOOLS REQUIRED

- 1/8" drill bit • Panel removal tool
- Phillips screwdriver • T-27 Torx screwdriver
- VW radio removal tool (Metra part #86-9001)

Attention! Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

DASH DISASSEMBLY

1. Open the storage compartment on top of the dash. Remove (1) T-27 Torx screw exposed, then unclip and remove the compartment. (Figure A)

Note: The screw is plastic and attached to a release clip. Once unscrewed, pull the clip out.


2. Remove (2) T-27 Torx screws securing the top of the radio. (Figure B)
3. Using a panel removal tool, carefully pry out the two outermost radio buttons:

With NAV: BAND / TRAFFIC

Without NAV: BAND / CLIMATE

4. Using VW radio removal keys (sold separately), release the radio. Slide the radio out, then unplug and remove.

Continue to Kit Preparation

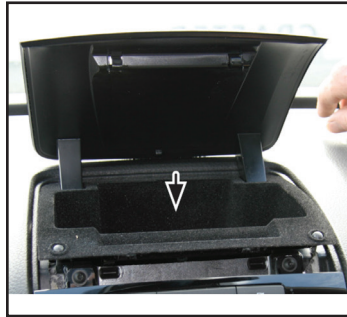

(Figure A)



(Figure B)

KIT PREPARATION

1. Push the hazard switch panel, from behind, out of the radio panel.
2. Push the hazard switch panel into the 95-9015HG **radio bezel** until it clicks in.

Continue to Kit Assembly

KIT ASSEMBLY

1. Secure the **radio brackets** to the radio using screws supplied with the radio.
2. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio for proper operation.
3. Slide the radio into the dash, then drill a 1/8" pilot hole in the dash at the (2) radio bracket locations. Secure the radio to the dash using (2) Phillips screws provided. (Figure A)
4. Connect the hazard switch panel to the vehicle, then clip the **radio bezel** to the dash. Secure using the factory screws.
5. Reinstall the storage pocket in reverse order of disassembly to complete the installation.



(Figure A)



95-9015HG
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**