



Installation instructions for part 99-1008


Kia Sorrento LX (without Sport package) 2003-2006 Spectra 2004.5 / Spectra (EX / LX) 2005-2006 99-1008

KIT FEATURES

- DIN radio provision with pocket
- ISO DIN radio provision with pocket

KIT COMPONENTS

- A) Radio housing
- B) ISO brackets
- C) ISO trim plate

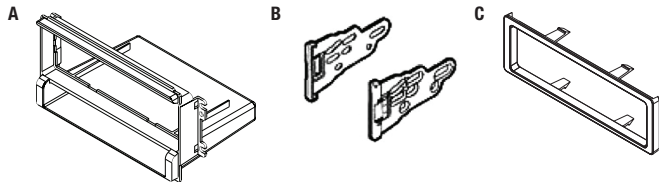

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7301

Antenna Adapter: • Not required

TOOLS REQUIRED

- Panel removal tool
- Phillips screwdriver

Table of Contents

Dash Disassembly

- Sorrento LX (without Sport package) 2003-2006..... 2
- Spectra 2004.5 / Spectra (EX / LX) 2005-2006..... 2

Kit Assembly

- DIN radio provision with pocket..... 3
- ISO DIN radio provision with pocket..... 3

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.

Dash Disassembly

Sorrento LX (without Sport package) 2003-2006

1. Open the ashtray, and then unsnap and remove the outside trim panels. (Figure A)
- Note:** Start at the bottom of the trimpanels.
2. Remove (8) Phillips screw securing the radio trim panel and then remove. (Figure B)
 3. Remove (4) Phillips securing the radio and then remove. (Figure C)
 4. Cut the scored lines on the mounting tabs of the *radio housing*. (Figure D)

Continue to kit assembly



(Figure A)



(Figure B)



(Figure C)



(Figure D)

Spectra 2004.5 / Spectra (EX / LX) 2005-2006

1. Using a panel removal tool, unsnap and remove the center dash panel including the climate controls and vents from around the radio. (Figure A)
2. Remove (4) Phillips screws securing the radio and then remove. (Figure B)

Continue to kit assembly



(Figure A)




(Figure B)

Kit Assembly

DIN radio provision with pocket


1. Remove the metal DIN sleeve from the aftermarket radio.
2. Slide the sleeve into the *radio housing* and secure by bending the metal locking tabs down. (Figure A)
3. Slide the radio back into the sleeve until it clicks in.
4. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
5. Secure the completed assembly to the dash, and then reassemble the dash in reverse order of disassembly.

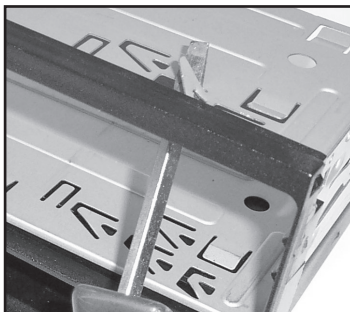

(Figure A)

ISO DIN radio provision with pocket

1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the *ISO brackets* to the radio with the screws supplied with the radio.
3. Slide the radio into the opening until the side clips engage. (Figure A)
4. Snap the *ISO trim plate* into the *radio housing*.
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
6. Secure the completed assembly to the dash, and then reassemble the dash in reverse order of disassembly.

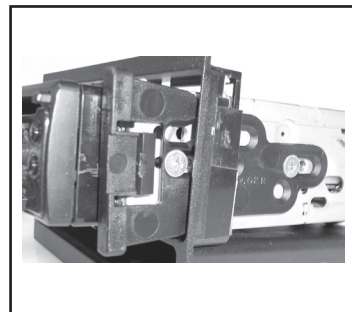

(Figure A)



Installation instructions for part 99-1008



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

REV. 5/26/2016 INST99-1008