



JEEP JL WRANGLER 2018-UP and JT GLADIATOR 2020-UP

Visit [metraonline.com](https://www.metraonline.com) to view the available installation parts and JEEP accessories.

KIT FEATURES

- Designed for Cube, work or driving lights
- 5-Gauge, powder coated steel
- Sold as pair
- Top and side mounts

WHAT'S IN THE BOX

- Left and right bracket
- Gaskets
- Mounting hardware
- Anti-sway/Stabilization hardware

Having difficulties?

Contact our tech support line at:
Techsupport@metra-sutosound.com

Or via phone at:
368.257.1187

TECH SUPPORT HOURS (EST)

Monday-Friday: 9:00AM – 7:00PM
Saturday: 10:00AM – 7:00PM
Sunday: 10:00AM – 4:00PM

Closed for most US Federal Holidays




Safety first: Please wear proper equipment when installing any products.

1. Start by removing the (4) T40 Torx bolts from either the driver or passenger side of the vehicle located at near the windshield wiper cowl and the outer fender.
2. Now remove the adhesive backing on the rubber gasket and stick it to the inside of the post mount. Align holes on gasket to holes on bracket, also apply rubber gasket to a clean surface.



Outer Fender Gaskets

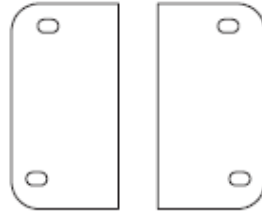

Top of Fender Gaskets

3. Take two 40mm spacers (large) and place one in each of the top fender bolt holes near the windshield wiper cowl.
4. With the help of a second person hold one of the included 10mm spacers (small) against each outer fender hole while a second person holds the bracket against the spacers. Maintaining pressure on the bracket against outer fender will be needed to keep the spacers sandwiched in place.

5. With the bracket held against fender, insert the new M8 x 1.25 x 30mm long button head Allen bolt (small) through the supplied nylon washer and thread it through the bracket, 10mm spacer and into the outer fender. This will now hold it in place for the next step.

Outside Fender Hardware



10mm Spacer for
M8 Bolt



8mm Black
Nylon Washer



M8 x 1.25 x 30mm
Button Head Allen Bolt

6. Then take the M6 x 50mm button head Allen bolt (large) with nylon washer and thread it through the bracket, 40mm spacer and into the top of the fender near the windshield wiper cowl.
7. Secure this union by using a 5mm Allen key (making sure not to tighten down completely until all four bolts are threaded, this will insure proper fitment).
8. Repeat these steps for the other side.
9. Check to make sure all hardware is tight. Note that small tweaks may be needed to achieve the best fit.

NOTE: These brackets were designed to accommodate most post mount cubes and other small light housings as well as having multiple mounting locations for your most desired mounting choice.