



MPS-POLCAM-F

INSTALLATION INSTRUCTIONS

#MetraPowerSports

INSTALLING MPS-POLCAM-F

Vehicles with the Ride Command Systems are pre-wired for a front camera. MPS-POLCAM-F plugs directly into the factory connector.


Step 1: Remove the front grille of your UTV.

Step 2: Locate the 4 pin connector in the center of the grille opening. Remove protective cap.

Step 3: Plug the 4 pin female connector into the OE plug.

Step 4: Mount the eyeball camera into the OE location.

Step 5: Plug the 4 pin DIN cables into each other and reassemble.

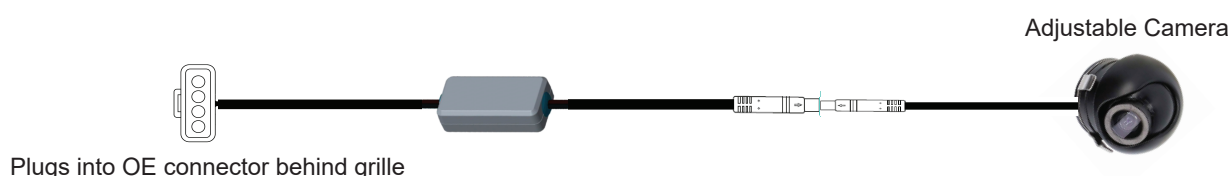

TEST YOUR NEW CAMERA!!

©COPYRIGHT 2020 METRA ELECTRONICS CORPORATION

Rev Date 7/15/2020



MPS-POLCAM-F

INSTALLATION INSTRUCTIONS

#MetraPowerSports

INSTALLING MPS-POLCAM-F

Vehicles with the Ride Command Systems are pre-wired for a front camera. MPS-POLCAM-F plugs directly into the factory connector.


Step 1: Remove the front grille of your UTV.

Step 2: Locate the 4 pin connector in the center of the grille opening. Remove protective cap.

Step 3: Plug the 4 pin female connector into the OE plug.

Step 4: Mount the eyeball camera into the OE location.

Step 5: Plug the 4 pin DIN cables into each other and reassemble.

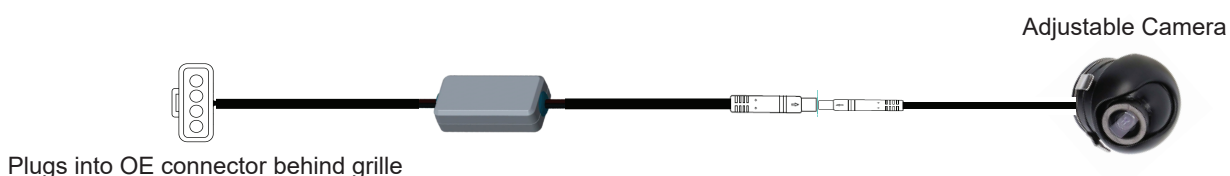

TEST YOUR NEW CAMERA!!

©COPYRIGHT 2020 METRA ELECTRONICS CORPORATION

Rev Date 7/15/2020