



GM Chime Interface 2014-2020

INTERFACE FEATURES

- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides wires for multimedia radios (park brake, reverse, speed sense)
- Used in non-amplified models, or when bypassing a factory amplifier
- Used in models without OnStar[®] or when not retaining OnStar[®]
- Retains all warning chimes
- High level speaker input
- Retains balance and fade
- Provides illumination output
- Micro-B USB updatable

INTERFACE COMPONENTS

- AXDI-GMLN9 interface
- LD-LCLAN-09 harness

TABLE OF CONTENTS

Applications	2
Connections LD-LCLAN-09.....	3
Installation	4
Programming.....	4

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Cutting tool
- Tape
- Crimping tool
- Connectors (i.e. butt-connectors, bell caps, etc.)

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product. **NOTE:** Refer also to the instructions included with the aftermarket accessory before installing this device.

APPLICATIONS

CHEVROLET

Colorado (1)	2015-2018
Equinox (1)	2018
Malibu (2)	2016-2018
Silverado (3)	2015-2018
Silverado 1500 (3)	2014-2018
Silverado 2500/3500 (3)	2015-2019
Silverado LD (1)	2019
Suburban	2015-2020
Tahoe	2015-2020

(1) With RPO code 105 or 106

(2) With radio code IPI


(3) With radio code 103, 105, or 106

The RPO code is located in the Service Parts Identification sticker

GMC

Canyon (1)	2015-2018
Sierra (3)	2015-2018
Sierra 1500 (3)	2014-2018
Sierra 2500/3500 (3)	2015-2019
Sierra Limited (1)	2019
Yukon / Yukon XL	2015-2020

CONNECTIONS: LD-LCLAN-09 DIAGRAM

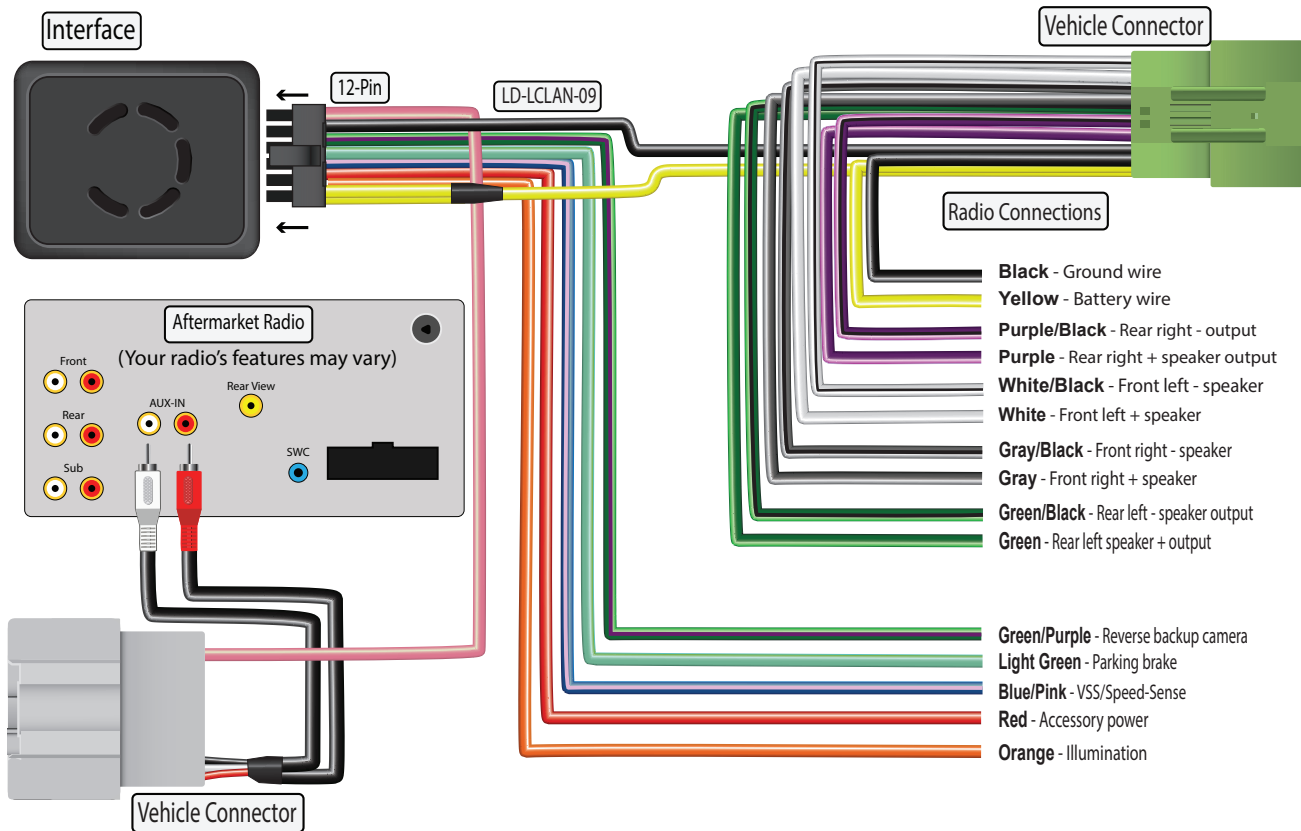

INSTALLATION

With the key in the off position:

- Connect the **LD-LCLAN-09** harness into the interface, and then to the wiring harness in the vehicle.

PROGRAMMING

Attention! If the interface loses power for any reason, the following steps will need to be performed again. Also, if installing an AXSWC connect it after you initialize and test the interface/radio, with the key in the off position.

- Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

- Turn the key to the off position, and then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians